


SIZING

1" = medium
Less than 1" = small
Greater than 1" = large

Medium EP2s fit most people. Size is based on dimension of your Helix Bowl.

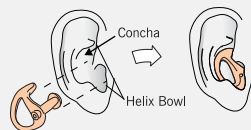

EARPRO
BY SUREFIRE®

18300 Mt. Baldy Circle
Fountain Valley, CA 92708

Tel: 800-828-8809
www.surefire.com/earproproducts



PATENTS PENDING



30-02-711 REV. B

EARPRO
BY SUREFIRE

EP2

CommEar® Boost
Radio Communication
Earpieces

- Single-flange design fits most people
- Directs radio transmissions directly into ear canal
- Extended-stem design helps reduce the possibility of gradual hearing loss
- Ergonomic shape and soft, durable polymer provide all-day comfort and extended product life

SM
LEFT



CommEar® Boost earpieces funnel radio transmissions directly into the ear for clear, covert hearing. Their adjustable sound stem extends farther into the ear canal, providing a "boost" effect, allowing for lower radio volume settings and reducing the possibility of gradual hearing loss. Made in the U.S.A. from a soft, hypoallergenic polymer, EP2s' ergonomic shape ensures a snug fit and makes them comfortable enough for extended use. And their low-profile design means they can be worn under a hat, helmet, headset, or mask—even while using the phone.

EP2 INSTALLATION



- Insert elbow connector of radio communication sound tube into exterior hole of EP2 earpiece and push in until snug.



- Drape sound tube over the back of ear and insert stem of EP2 earpiece into ear canal. Fit half-round earpiece helix to the natural contour of the concha surrounding ear canal.



- To adjust stem length of EP2, remove earpiece and lengthen or shorten stem, by pulling outward or pushing inward, to comfort, then reinstall per instructions.

- Some wearers prefer to use a "rotation" insertion, starting with a slightly forward orientation, then rotating the earpiece backward while inserting, ending up vertically aligned and locked into place.

CLEANING AND PRODUCT LIFE

EarPro earpieces should last from 3 to 6+ months, depending on usage and care. Clean with mild soap and water or alcohol swabs and allow to air dry. Replace when they become stiff and hardened.

Do not leave or store your EarPro earpieces in direct sunlight. If exposed to salt water, rinse with fresh water and allow to air dry.

WARNING: Improper fit of this device will reduce its effectiveness. Consult instructions for a proper fit. Failure to follow instructions could result in hearing loss and/or injury. EP2 CommEar® Boost earpieces fit most people; however, no hearing product fits everyone. If proper fit cannot be achieved following instructions, discontinue use.

EARPRO BY SUREFIRE WARRANTY

EarPro by SureFire warrants this product to be free from defect in workmanship and materials for a period of 90 days from the date of purchase. At our discretion, we will repair, replace, or refund your original purchase price of this product if it is determined, by us, to be defective. Damage resulting from abuse, neglect, or altering this product from its original state is not covered.